

## ATTACHING THE PAD

Line up the front of your VACMOP™ with the outer edge of the pad with the dirt chamber facing up.

When you hear it click into place, you're good to go.



## REPLACING THE PAD

Replace the disposable pad when it becomes fully saturated, its dust bin is full, it is noticeably dirty, or if the VACMOP is showing signs of reduced suction power.

Press the release button to drop the pad into the trash. Enjoy your complete clean.



## LOCK IN DEBRIS

All of the debris you vacuum up goes straight into the pad—the dirt chamber in the pad locks away debris, dirt, hair, and more.

## VACUUM IT ALL—FROM MUNDANE TO MESSY.

Coffee Grounds  
Jelly Beans Oats  
Nuts  
Cheddar Fish  
Cat Litter  
Hair  
Pet Hair Cheese  
Crackers Cereal  
Apple Sauce And more

